



Conditions for the Provision of a Rural Residential Water Supply

1. The metering and supply point will be located adjacent to Central Tablelands Water's water main. The connection between the metering point and the consumer's on-site storage tank is the responsibility of the consumer, as is the maintenance of this service line.
2. Supply from Central Tablelands Water's main will be governed by a flow control, nominally set to a limit of 6.3 litres per minute. A back flow prevention device will also be fitted to the service. This device is to safeguard against possible cross connection hazards.
3. On-site storage with a minimum capacity of 20 kilolitres must be provided. The storage tank will require an elevated location to provide pressure or a pressure pump system may need to be installed.
4. The water supply is required to be directly connected from the metering point to the storage tank. No intermediate connections are allowable. The water level in the storage tank is to be controlled automatically by a ball valve. A minimum air gap of 100mm must be maintained between the tank filling inlet and tank overflow.
5. All private installations, from the meter, are to be carried out by a suitably qualified and licensed person. The requirements of the Local Government (Water, Sewerage and Drainage) Regulation 1993, the Water Supply Code, and appropriate trade standards must be met.
6. Water supply will only be available for domestic purposes and/or the watering of livestock.
7. Where the private installation is required to cross over other privately owned land, that owner's written permission is to be submitted to Central Tablelands Water prior to the supply being connected.
8. Where the private installation is required to be placed in a road or rail reserve, the local government council or authority responsible is to be consulted and any required conditions complied with. Central Tablelands Water is to be provided with the authority's written permission for the work proposed, prior to the supply being connected.
9. Compliance with conditions 4 and 5 are required prior to tapping of the water mains by Central Tablelands Water staff.
10. Central Tablelands Water imposes an access, or availability charge on all services. Additionally, Central Tablelands Water imposes a charge on all water that is consumed through the meter. Quarterly accounts are rendered for the availability charge and water consumption charges.
11. The cost of connecting the water supply includes the provision of a 20mm meter and a back flow prevention device. Both of these devices remain the property of Central Tablelands Water, although the maintenance and care of both devices is the responsibility of the consumer. The cost of providing the supply is payable in advance.
12. The consumer is responsible for the maintenance and operation of the water supply installation from the meter. Central Tablelands Water will not accept any responsibility for the loss of water or resultant cost from and after the installed meter.

13. In addition to the above conditions, contained in clauses 1 to 11, Central Tablelands Water reserves the right to alter or amend any of the conditions of supply in line with changing standards and policies. Your failure to abide by any of these conditions in the future may lead to Council refusing to continue to supply your property with water.

Conditions for the Provision of a Rural Residential Water Supply

Information for Consumers

The following information is provided for your benefit in complying with Council's rural residential service conditions. Compliance is necessary to ensure the integrity of the supply to all consumers.

Existing Service

Is a storage tank (or tanks) with a minimum total capacity of 20 kilolitres available?

- Yes No You must install a tank (or tanks) with a minimum total capacity of 20 kilolitres or the supply will not be made available. See clauses 3 and 4 of the Supply Conditions.

Does the storage tank inlet(s) discharge to the top of the tank(s)?


- Yes No You must alter the plumbing so that the supply discharges to the top of the tank. This is to ensure that there is no possibility of back flow. See clause 4 of the Supply Conditions and diagram below.

Does the storage tank(s) have a minimum 100mm air gap between inlet and overflow?

- Yes No You must ensure that a minimum air gap of 100mm is maintained between the level of the inlet to the tank and the overflow. This is to ensure that there is no possibility of back flow. See clause 4 of the Supply Conditions and diagram below.

Does the supply line run directly between the metering point and the storage tank(s)?

- Yes No You must alter the plumbing so as to eliminate any intermediate connections. This can be done by running the pipework from the main storage tank, or by installing smaller storages at each intermediate connection. Refer to clause 4 of the Supply Conditions and diagram below.

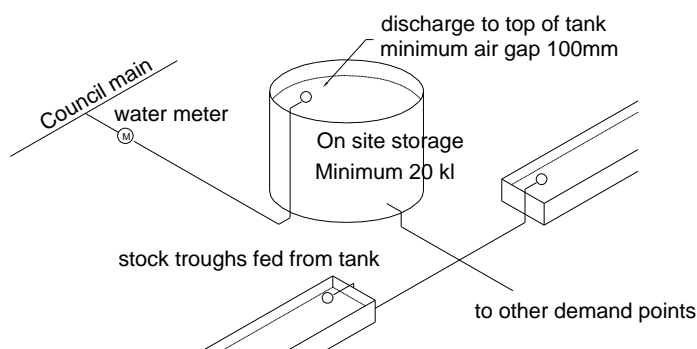

Typical Rural Connection Arrangement